

GT DIGITAL GARMENT PRINTERS

How to Check/Clean/Change the Nozzle

How to check spray nozzle.


1. If the spray doesn't work properly, remove the nozzle as seen below.



2. Make sure that you do not accidently remove the O-Ring when you remove the nozzle. If you accidently remove the O-ring you can just place it back into the grooved notch seen below.



3. Once you separate the nozzle from the casing clean it by using the cleaning pin provided with the machine.

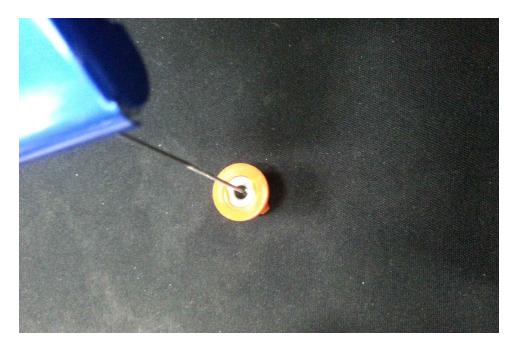

4. Using the cleaning brush provided with the machine brush the tip of the nozzle to help dislodge any debris and the rinse it under running water.



5. Once you finish cleaning, reassemble the nozzle into the fitting and then reattach it in the machine.



6. Either using a pair of pliers or by hand to adjust the nozzle until it is straight to assure an even spray area.



