





Cube Parts List

Item	CUBE-CLEANING S/W	
Description	Cleaning Switch	
Part Number	KGF-HM1W	
Remarks	-	
Item	CUBE-EMER S/W	
Description	Emergency Switch	
Part Number	KGE-N4R1R	
Remarks	-	
Item	CUBE-START S/W	
Description	Start Switch	
Part Number	KGX-HMD21G	
Remarks	-	
Item	CUBE-MAIN CONTROLLER	
Description	Main Control Board	
Part Number	PS-C-B001	
Remarks	-	
Item	CUBE-MOVING MOTOR	
Description	Moving Motor	
Part Number	KGC-0015-3429A	
Remarks	-	
Item	Spray Solenoid	
Description	Nozzle	
Part Number	IGV1D043	
Remarks	*Not Under Warranty	
Item	CUBE-NOZZLE TIP	
Description	Nozzle Tip	
Part Number	Nozzle Tip	
Remarks	*Not Under Warranty	
Item	CUBE-NOZZLE INLET FITTING	
Description	Nozzle Inlet Fitting	
Part Number	TL 06-01	
Remarks		
Item	CUBE-PUMP	
Description	Pump (with wire)	
Part Number	DWP-720-24V	
Remarks		

Item	CUBE-PUMP IN/OUT FITTING	
Description	Pump In/Outlet Fitting	
Part Number	PG 08-06	
Remarks		
Item	CUBE-SMPS	
Description	SMPS	
Part Number	RS-100-24	
Remarks		
Item	CUBE-VALVE INLET FITTING	
Description	Valve Inlet Fitting	
Part Number	TC 06-01	
Remarks		
Item	Solenoid Repair Kit	
Description	Solenoid Repair Kit for Spray Solenoid	
Part Number	IGV1D148	
Remarks		
Item	CUBE-SLIDE RAIL	
Description	Bottom Slide Rail 1set	
Part Number	S-4600	
Remarks	*Not Under Warranty	